

NOTES

1. WHEEL BEARINGS REQUIRE CLEANING AND REPACKING AFTER EXPOSURE TO AN ABNORMAL QUANTITY OF WATER.
2. SEE THE LATEST REVISION OF LYCOMING SERVICE INSTRUCTIONS NO. 1014 FOR USE OF DETERGENT OIL.
3. MISCELLANEOUS - DURING ROUTINE MAINTENANCE CHECKS, APPLY LUBRICANT TO MISCELLANEOUS LINKAGES.
4. TRANSMISSIONS SHOULD BE DISASSEMBLED, CLEANED, INSPECTED, AND LUBRICATED AT EACH 500 HOUR INTERVAL OR ANNUALLY. ACTUATOR SCREWS SHOULD BE LUBRICATED AT EACH 100 HOUR INTERVAL OR ANNUALLY.

CAUTIONS

1. DO NOT USE HYDRAULIC FLUID WITH A CASTOR OIL OR ESTER BASE.
2. DO NOT OVER-LUBRICATE COCKPIT CONTROLS.
3. DO NOT APPLY LUBRICANT TO RUBBER PARTS.

EXAMPLE

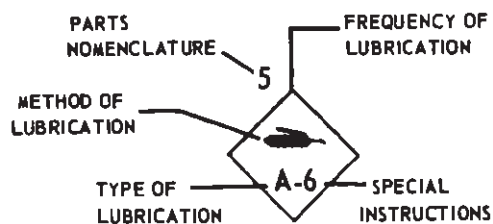


Figure 2-20. Lubrication Chart